 
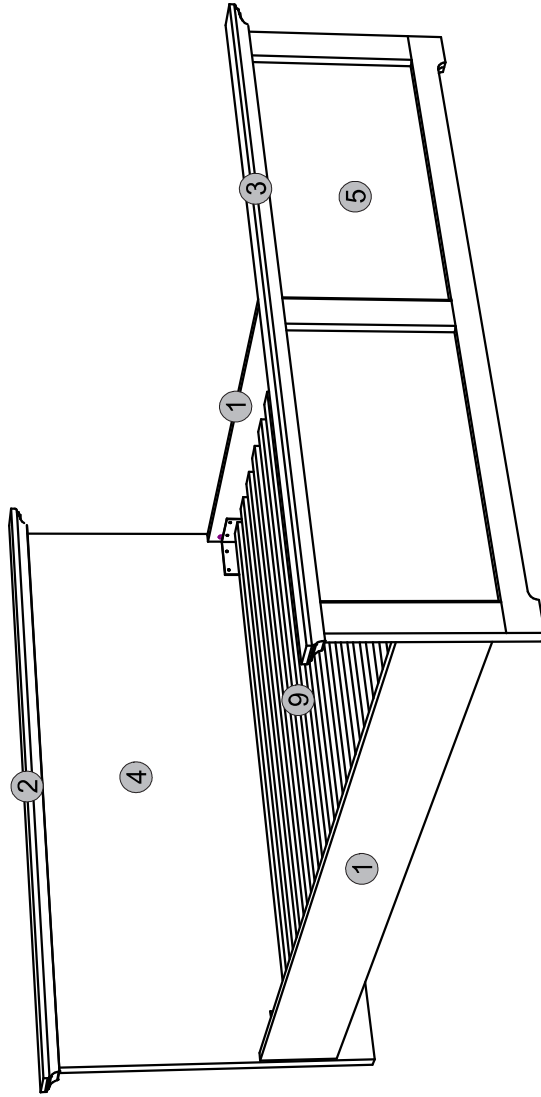 
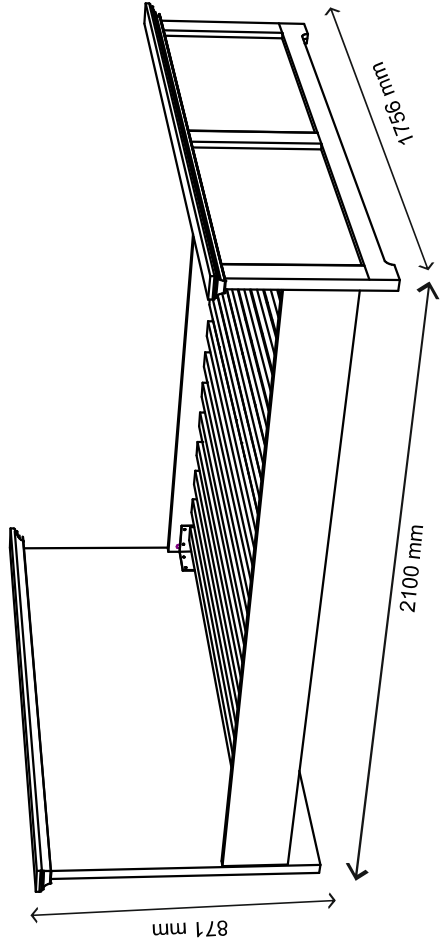 
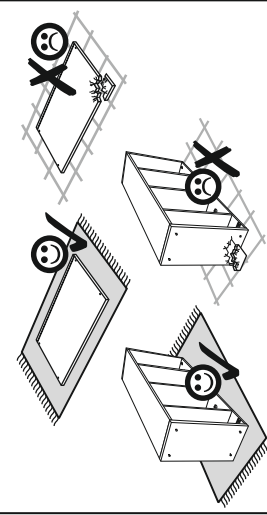 
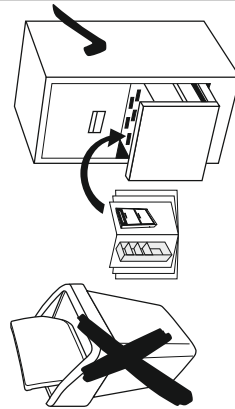 
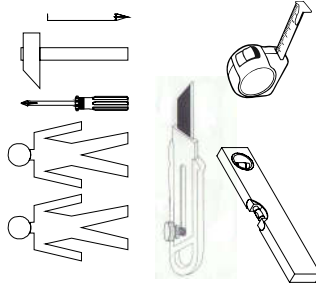 
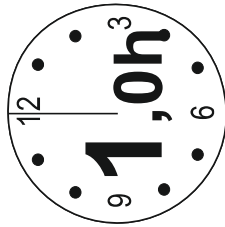 



Instalation manual

ARSAL: LOZE 160

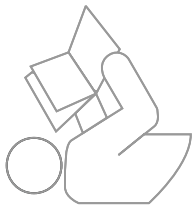


Element symbol	Dimensions	Code	Package
1	2000 22	LOZE160.004	3/3
2	1756 84 16/46	LOZE160.005	3/3
3	1756 68 16/46	LOZE160.006	3/3
4	1654 850 16/32	LOZE160.001	1/1
5	1654 484 16/32	LOZE160.002	2/2
6	1880 30 25 2		3/3
7	1980 70 27 1		3/3
8	235 70 27 1		3/3
9	786 2000 20 2		3/3


8x	8x	32x	8x	12x	8x	2x	1x
1x	6x	8x	4x	2x	2x	12x	22x

 


1

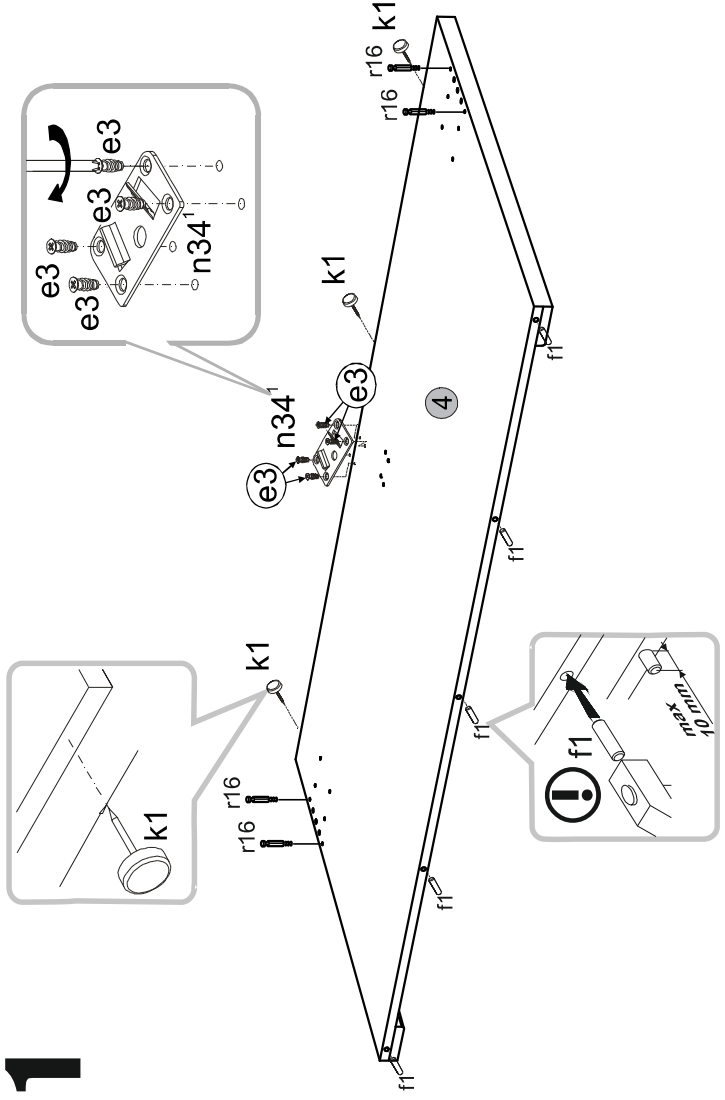 


3

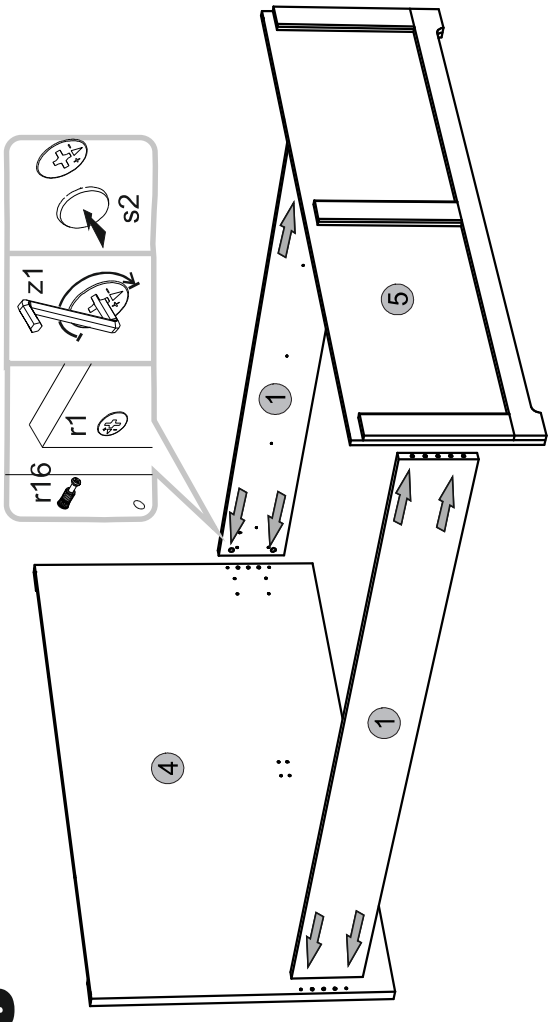 


2

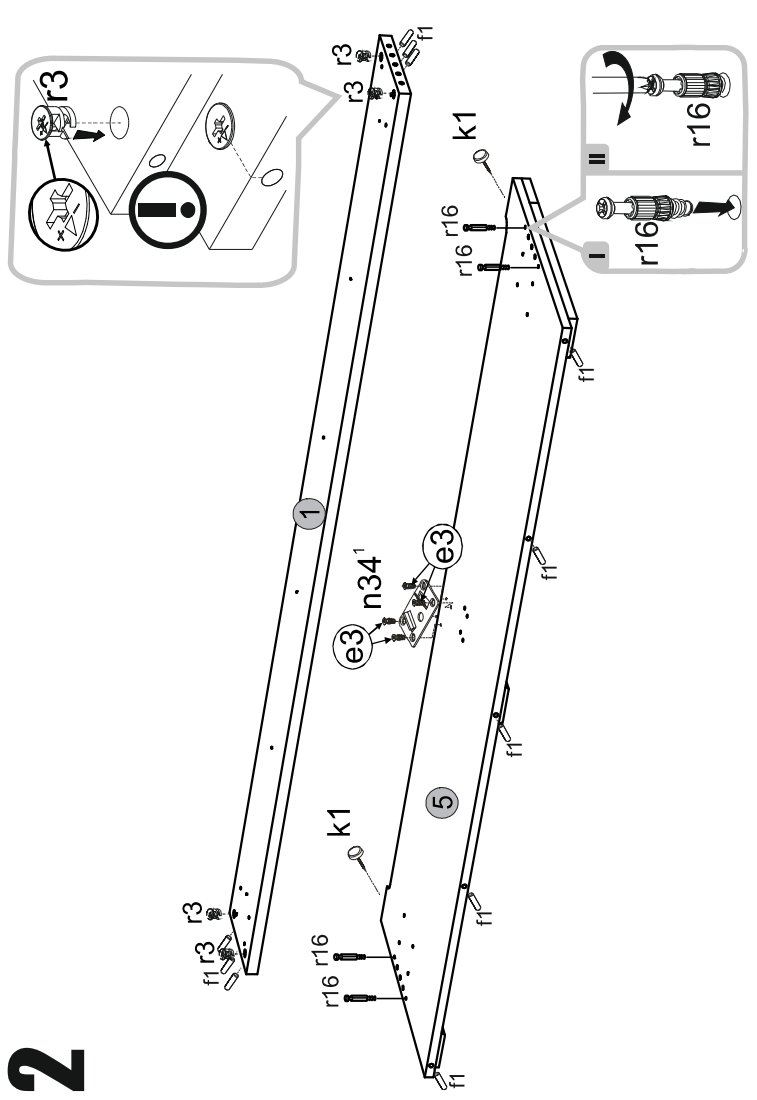 


4

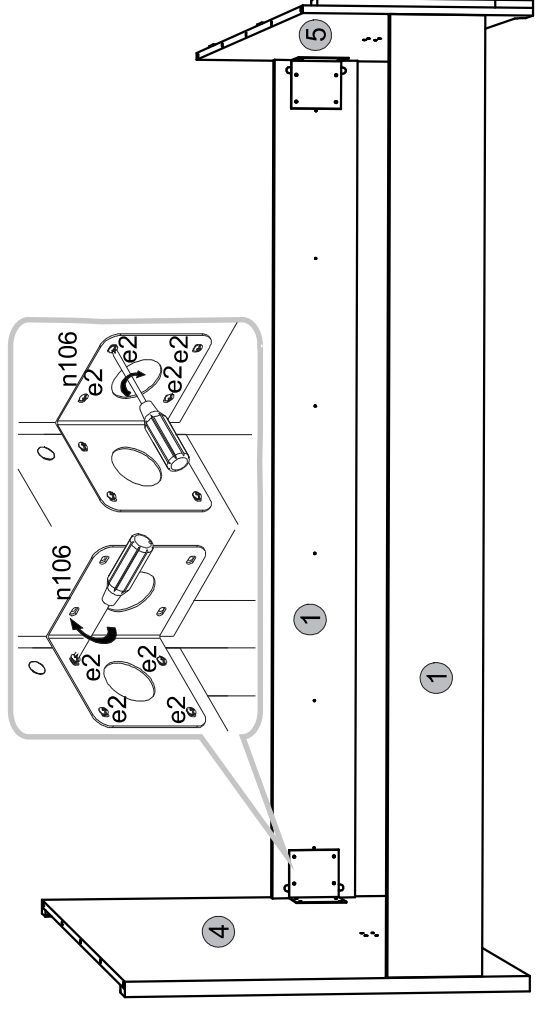 


7

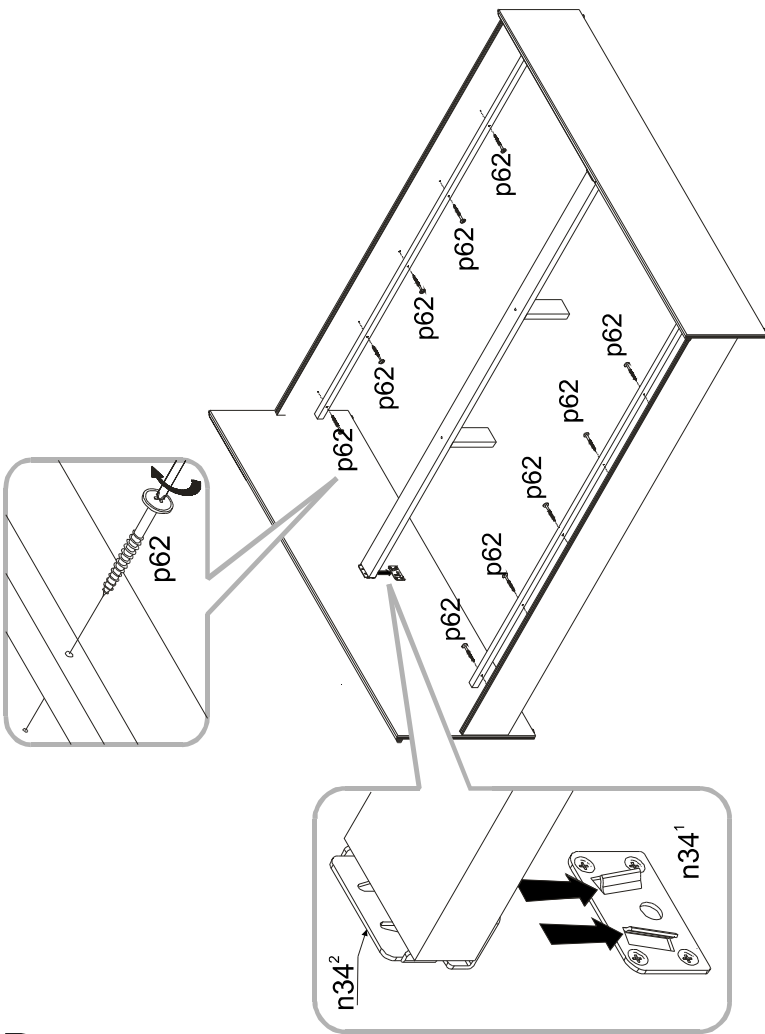 

8

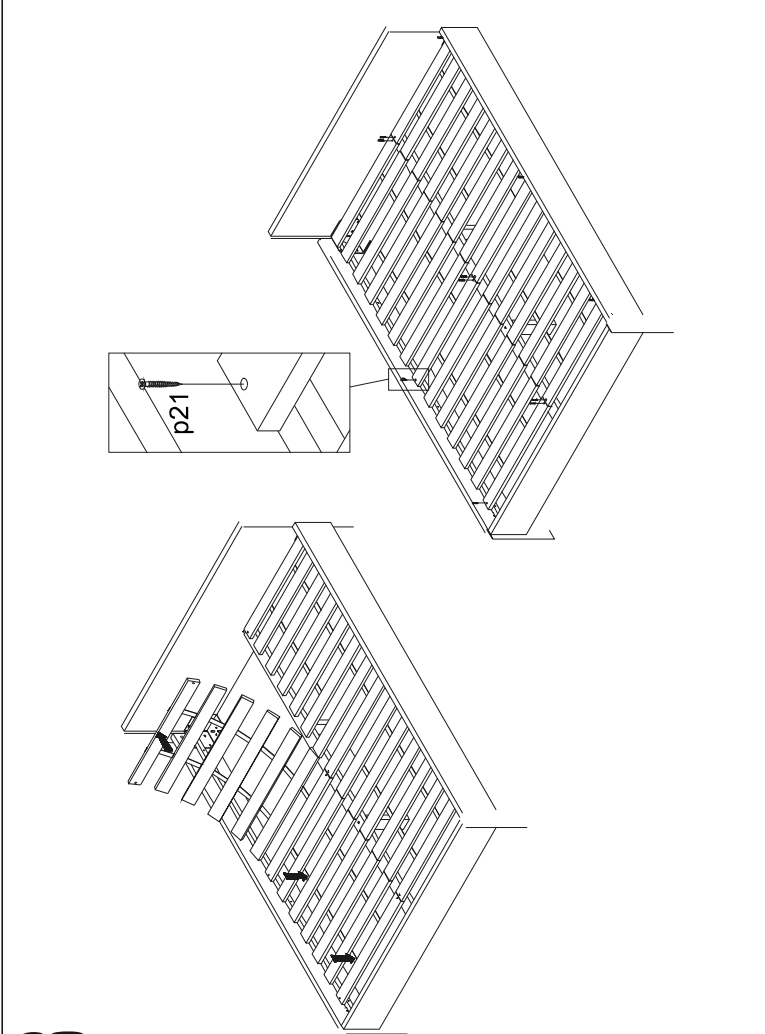 

5

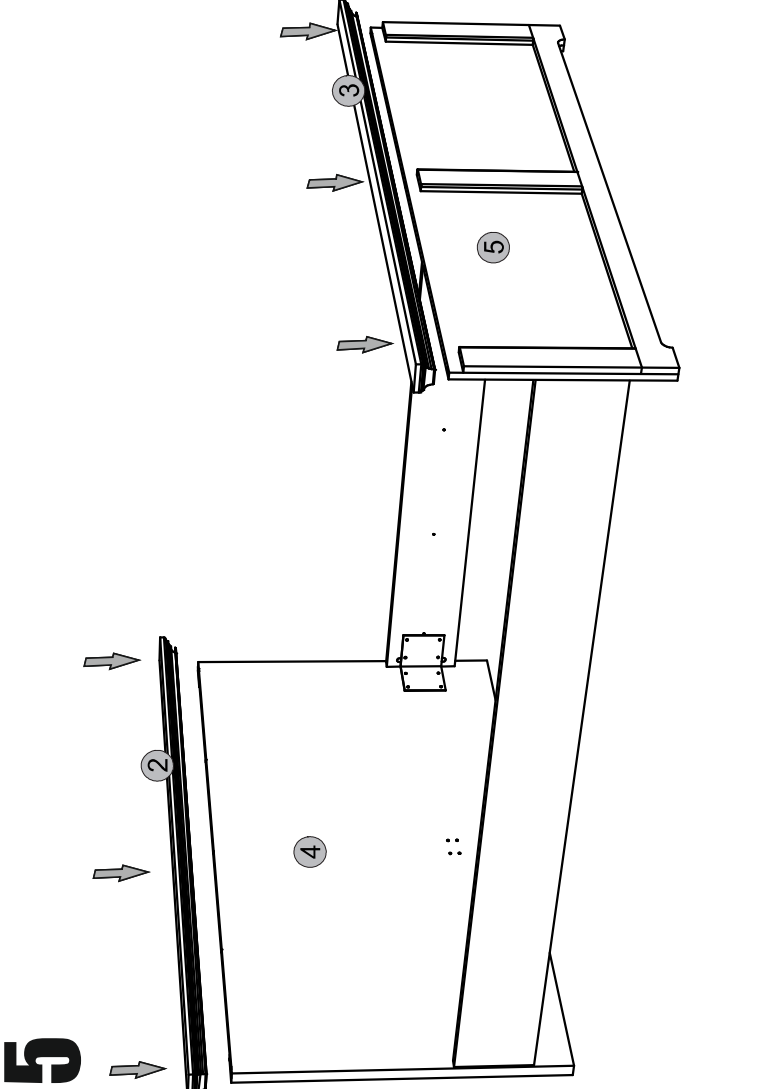 

6

